
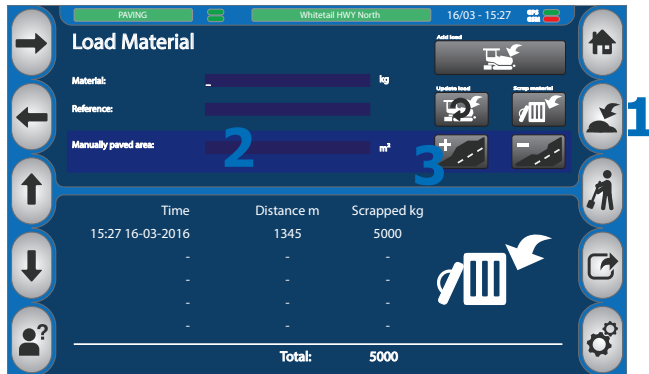




## Add Manually paved area

- 1 Press the "Load" button to access the Load menu
- 2 Enter the area of the manually paved area you want to add
- 3 Press "" to register the area





After adding the manually paved area, a list of manually paved areas will be displayed briefly on the bottom screen. The list can also be accessed by using the arrow buttons right and left, when in the "Load" menu.

 The "" button can be used to adjust the size of the area, if an area too large has been entered into the system

## Export Data

- 1 Press the "Export" button to access the Export menu and insert the MatManager™ USB stick that came with the system
- 2 Select the job you wish to export in the dropdown menu. Press and hold with your finger and the list of job opens. Slide your finger down to the job you wish to select, and release
- 3 Press "Export report to file" to export a predefined report file, that can be opened and printed from a pc
- 4 Press "Export log to file" to export an encrypted safe data report that can be uploaded to MatWiser™ for analysis and reporting. (Not available in MatManager™ Light)

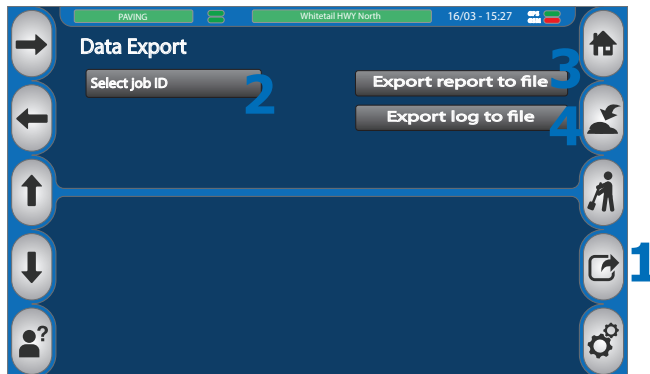

 MatWiser™ is not available for MatManager™ Light System. If you wish to access this information, an upgrade is available. Please contact your local sales office

# MatManager™

## Quick Guide to Daily Operation



### Start a new job

- 1** Press the "Job" button to access the Job menu
- 2** Enter information using the keyboard on the screen  
Material ID, Paver ID, Crew & Density is optional
- 3** Press "Create new job" to create the new job

After creating a new job you will be taken to the Home screen and the job starts.  
The new job is added to the list of jobs.



### Delete job


It is not possible to delete the current job.  
End the current job, to be able to delete it.

- 4** End current job
- 5** Delete job

### Select a previously created job


- 1** Press the "Job" button to access the Job menu
- 2** Activate the dropdown menu by pressing and holding "Select Job ID"
- 3** Move your finger down to the job you want to select and press "Select existing job"

After selecting a previously created job you will be taken to the Home screen and the job starts.

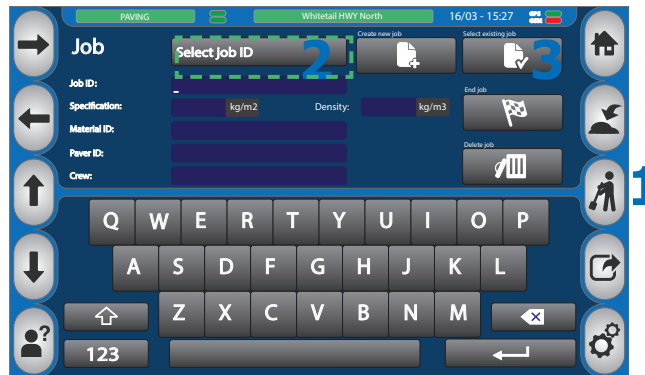

### Enter load, modify load or scrap material

- 1** Press the "Load" button to access the Load menu
- 2** Enter load in kg using the keyboard on the screen  
Reference code is optional
- 3** Press "Add load" to register the load **or**
- 4** Press "Update load" to modify the current load **or**
- 5** Press "Scrap material" to register that an amount of the material has been scrapped

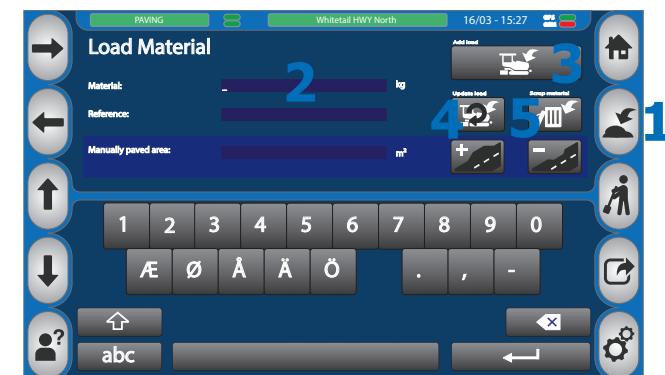

After registering or modifying a load, the load list will be displayed for 4 sec. and then return to the job.

After scrapping material, a list of scrapped material will be displayed briefly in the bottom view.

The list of loads can be accessed by using the arrow buttons right and left, when in the "Load" menu.